



# Sentinel 1116-10

## Sentinel Drill Guide Location Diagram

For use with Panel file: 1116-10\_Panel.dxf

Drill into case while aligning Sentinel Drill Guide with ribs and lip of case, as shown

