



# Sentinel 1622-12

## Sentinel Drill Guide Location Diagram

For use with Panel file: 1622-12\_Panel.dxf

Drill into case while aligning Sentinel Drill Guide with ribs and lip of case, as shown

