



Sentinel 1622-8

Sentinel Drill Guide Location Diagram

For use with Panel file: 1622-8_Panel.dxf

Drill into case while aligning Sentinel Drill Guide with ribs and lip of case, as shown

