

### Sentinel Drill Guide Location Diagram

For use with Panel file: 912-4\_Panel.dxf

Drill into case while aligning Sentinel Drill Guide with ribs and lip of case, as shown

